



Twin Pack Mixing & Dispensing : A User Guide



Take the twinpack out of the outer wrapper




Open out the twinpack



Remove the dividing clip and rail



The resin and hardener are now ready to mix

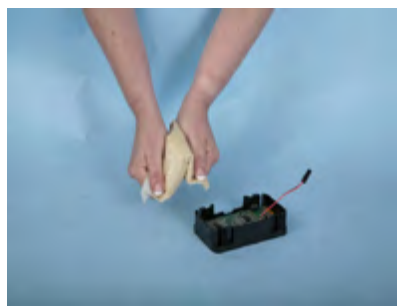

Mix the components together for 1 minute (this will depend on the products pot life)



Using the clip or rail push the material away from the corners



Mix the material again thoroughly until a uniform mix or colour is achieved



Using the clip or rail push the material away from the pointed end



The pack is now ready for use



Take a pair of sissors and snip the pointed end of the pack



Carefully pour the material into/onto the component